



1 - Placer la garniture Ø 6-15, Ø 15-20 ou Ø 22-27 autour du câble à l'emplacement du crochet "J".



2 - Monter le crochet en "J" sur poteau (sur queue de cochon, par feuillard ou boulon) et dégager le boulon.



3 - Introduire l'ensemble "câble + garniture" dans le crochet "J".



4 - Replacer le boulon dans son logement et effectuer le serrage avec une clé de 13 mm, couple maxi 2,5 N.m ou jusqu'à rupture du papillon fusible.



Fixation par 2 bandes de feuillard
20x0,7 ou 0,4 mm



Fixation sur queue de cochon
Ø 16 mm maxi



Fixation par boulon





1 - Install the protective sheath Ø 6-15 or Ø 15-20 around the cable at the location of the "J" hook.



2 - Install the "J" hook on the pole (on pigtail, or with steel strap or bolt) and remove the bolt.



3 - Place the cable and the protective sheath in the "J" hook.




4 - Slot the bolt in its hole and tighten with a 13 mm wrench, maxi torque value 2,5 N.m. or until the break of the shear-off wing nut.



Fixing with 2 steel straps
20 x 0,7 or 0,4 mm



Fixing on pigtail
Ø 16 mm maxi

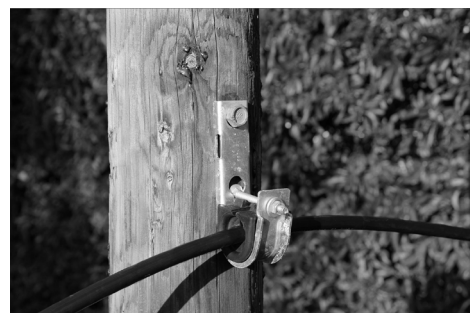

Fixing with bolt

